# Oval Keepsake Box

Frank Pickett

Notes:

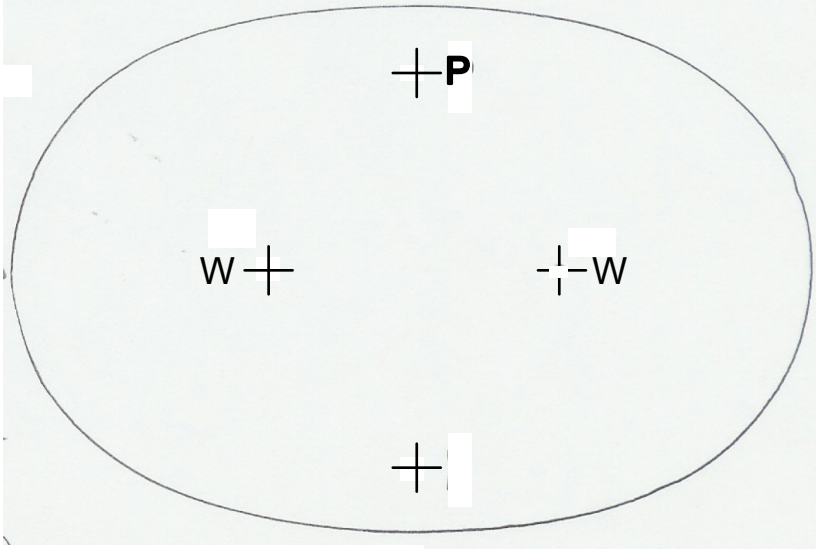


The lid and bottom may from one piece of wood.

If 2 pieces of wood tape them together and treat as 1 piece.

Saw and sand the outline to shape and size.

Drill 3/8" diameter pin holes (P) 3/8" 1" deep.

Saw off or detach the lid.

Drill 2" diameter wells (W) in the bottom only. Sand any sharp edges where holes meet. Fill the drill pilot holes in the bottom.

Round over (1/8") the lid first. Do the underside first then mount on the box bottom to do the upper side. This the guide pin roller something to ride on.

Round over (1/8") the bottom, inside and out.

Use 3/8" dowels for pins to locate the lid.

Sand, finish then flock the inside.

If doing more than one box keep lids and boxes in sets.